


Bench Assembly

MF2080 - Detention Bench Single

ITEM NO.	DESCRIPTION	QTY
1	Seat	1
2	Tubular Legs	2
3	3/8" x 3" Bolts	4
4	3/8" Flat Washers	6
5	3/8" Lock Nut	4
6	5/16" Assembly Wrench (not shown)	1
7	Detention Rod	1
8	3/8" x 3/4" Bolts	2
9	Loc-Tite #262	1

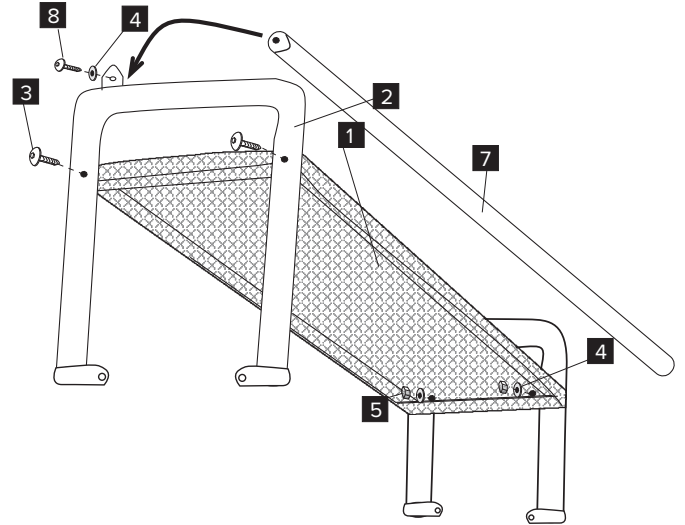


NOTE: Follow manufacturer's instruction for application of Loc-Tite #262 on detention bar bolts and set screws.

Bench Assembly

MF2083 - Detention Bench Double

ITEM NO.	DESCRIPTION	QTY
1	Seat	2
2	Tubular Legs	3
3	3/8" x 3" Bolts	8
4	3/8" Flat Washers	10
5	3/8" Lock Nut	6
6	5/16" Assembly Wrench (not shown)	1
7	Detention Rod	2
8	3/8" x 11/4" Set Screw	1
9	Loc-Tite #262	1

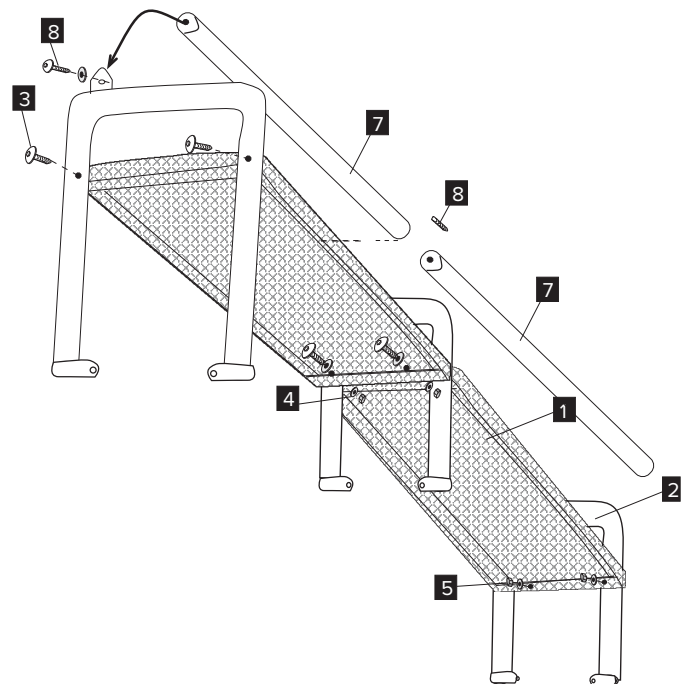

To install Rawl-Bolt™ one piece heavy duty anchors, follow simple instructions below:

1. With fixtures in place, drill hole of same nominal diameter as the Rawl-Bolt.™
2. Remove tag from assembled anchor. Insert anchor through hole in fixture.
3. Tap Rawl-Bolt™ into hole until washer and bolt head are seated against fixture.
4. Tighten with wrench.

